


## 6. ACTIVATING A FLOATING NETWORK LICENSE SETUP USING MANUAL METHOD

Given in this chapter are the steps to activate a <u>Floating Network License Setup</u> using the Automatic option of <u>Online Activation</u> licensing method.


## Steps to Activate the Floating Network License Setup

- i. Ensure that the conditions listed in <u>Step 1</u> and <u>Step 2</u> of <u>Chapter 3</u> in this document are fulfilled.
- ii. On the CAMWorks License Server, launch the CAMWorks License Manager program.
- iii. The CAMWorks License Manager dialog box will be displayed. Switch to the Server Settings tab.
- iv. Within the *License Server* group box, click on the *Use this machine as License Server* button.

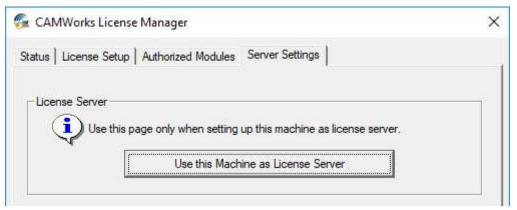

'Use this Machine as License Server' button in Server Settings Tab

v. In the **Server License Type** dropdown list, select **Online Activations** option.

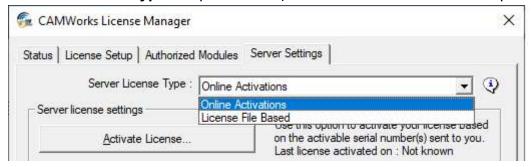

Select the 'Online Activations' Option for Server License Type

vi. Parameters associated with online activation of the *Floating Network Server License* will be displayed in this tab. In the *Server License Settings* group box under this tab, click on the *Activate License...* button.




- vii. The *CAMWorks Product Activation* dialog box will be displayed. Select the *Manually via E-mail* option.
- viii. In the field provided below the label *Enter your Activation ID(s)* and click on *Add button:*, input the Activation ID provided to you.



**CAMWorks Product Activation Dialog Box** 


- ix. Click on the Add button adjacent to this field. The Activation ID input by you will then be listed in the Activation IDs to be activated list box below the field.
- x. If you have multiple Activation IDs, then repeat steps ix. and x.
- xi. Place a check in the *I have read the HCL Technologies Privacy Policy and agree to its terms and conditions* check box.
- xii. Placing in the check in this checkbox activates the *Activate My Products...* button at the bottom of the dialog box. Click on this button.
- xiii. The *CAMWorks Product Activation Manual Method Wizard* will be displayed. Provide your username and email ID and click the *Save* button.

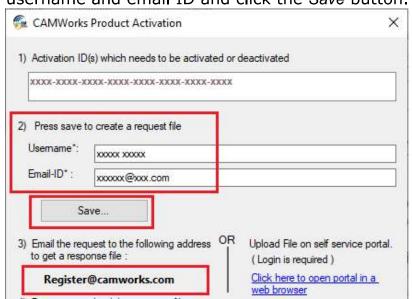

**CAMWorks Product Activation - Manual Method Wizard** 




- xiv. A modal window indicating that the file has been successfully generated and saved will be displayed. This message will also indicate the file path to the saved file. This license request file generated contains the Activation ID(s) to be validated and activated.
- xv. Email this license request file to <a href="Register@camworks.com">Register@camworks.com</a>.

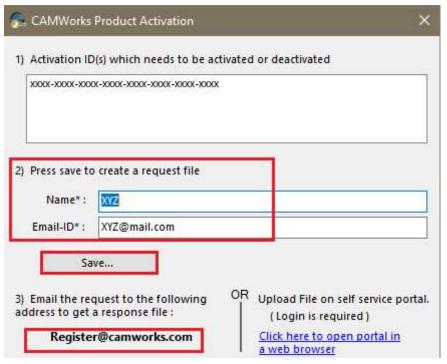

**CAMWorks Product Activation – Manual Method Wizard** 


- xvi. You will receive a *CAMWorks Response File* (\*.cwlic) file via email within maximum one business day. Save this file on the machine on which you intend to activate the license.
- xvii. Click on the Activate My Products... command button in the CAMWorks Product Activation dialog box again to invoke the CAMWorks Product Activation Manual Method Wizard.
- xviii. Click on the *Open...* button in this wizard to browse and select this *Response* file.

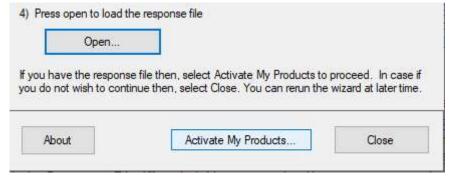

Bottom portion of the CAMWorks Product Activation – Manual Method Wizard




- xix. Once this file is selected, click on the *Activate My Products...* button at the bottom of the wizard.
- xx. If successfully activated, the CAMWorks Product Activation Currently Activated Products dialog box listing all the activated products will be displayed. This user interface will list each activated CAMWorks product, the expiry date of the product, and the expiry date of its User Subscription Plan (USP) in tabular format.

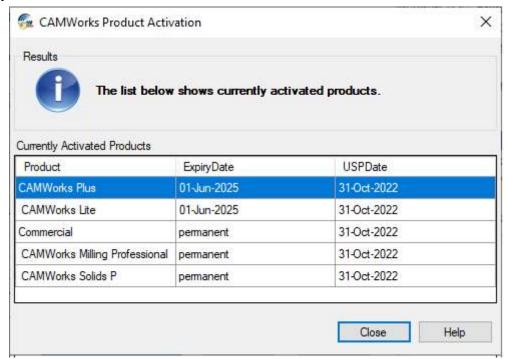

**CAMWorks Product Activation – Currently Activated Products Dialog Box** 


- xxi. Click on the Close button to close this user interface.
- xxii. The user interface will now revert to the Server Settings tab. Input the mandatory (primary) Server Port number and Secondary Port number (optional) in the fields provided within the Options group box of this tab.
- xxiii. Click on the Start License Service button within the Options group box of this tab.

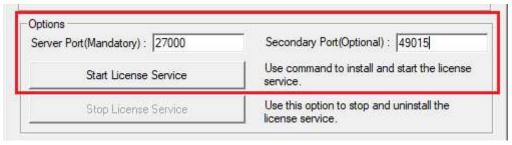

**Options Group Box of Server Settings Tab** 

xxiv. If successfully activated, the *Status* group box at the bottom of the tab will indicate that the license service is now running.

## **License Activation Using Online Activation Method**

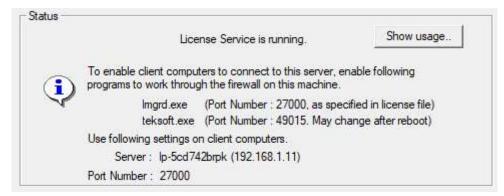

Message displayed in the Status Group Box when License Service is running successfully

- xxv. Click on the *Apply* button at the bottom of the *CAMWorks License Manager* dialog box.
  - Your CAMWorks license is now successfully activated and the CAMWorks License Service is also running on your CAMWorks License Server.
- xxvi. The next step involves establishing license access to the *CAMWorks License Server* from the client machines. For detailed steps, refer: <u>Step 4: Activating the License on Clients of the Floating Network.</u>
  - Once done, the activation of the *CAMWorks* license on your *Floating Network* Setup will be successfully completed. You can now run the *CAMWorks* application on all the Clients.