7. RENEWING/UPGRADING A FLOATING NETWORK SETUP USING MANUAL METHOD

You need to reactivate your *CAMWorks* license when your license or User Subscription Plan expires or when you upgrade your license to include more CAMWorks modules.

Given in this chapter are the steps to reactivate your Floating Network Server License using the Manual option of the Online License Reactivation Method.

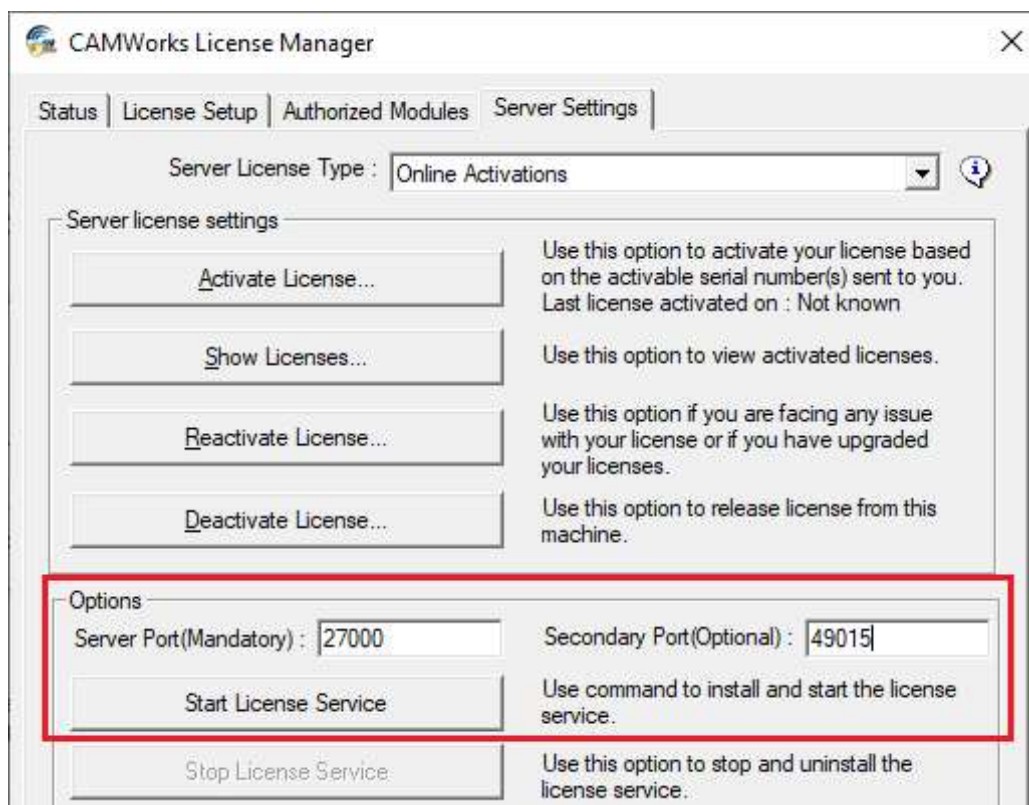## Steps to Reactivate a Floating Network License using Manual Method

1. Launch the CAMWorks License Manager program. The *CAMWorks License Manager* dialog box will be displayed.
2. Switch to the *Server Settings* tab. Under this tab, select *Online Activations* as the *Server License Method*.
3. Observe that the *Status* group box indicates that the *CAMWorks License Service* is running. Click on the *Stop License Service* button within the *Options* group box of this tab. This action will stop and uninstall the active *CAMWorks License Service*.
4. A modal window stating that the License Service has been marked for removal and requesting you to close the License Manager for complete removal of the license service will be displayed. Click on the OK button within this modal to revert to the *Server Settings* tab.
5. Observe that the *Stop License Service* button is now disabled. Close the *CAMWorks License Manager* dialog box.
6. Launch the CAMWorks License Manager program again. Switch to the *Server Settings* tab.
7. Observe that the *Reactivate Existing...* button is now enabled. Click on this button.
8. The *CAMWorks Product Reactivation* dialog box will be displayed. Select the *Manually via Email* option.
9. The **Please select the Product(s) to be reactivated** list box will display all the CAMWorks products currently active on the machine. The license expiry date, User Subscription Plan (USP) expiry date and associated *Activation ID* for each product will also be displayed.
10. In this list box, place a check against all the product entries whose licenses you wish to reactivate.

11. Place a check in the '*I have read the HCL Technologies Privacy Policy and agree to its terms and conditions*' check box.

12. Placing the check in this check box activates the **Reactivate My Products...** button at the bottom of the dialog box. Click on this button.

13. The *CAMWorks Product Reactivation - Manual Method* Wizard will be displayed. Input your user name and email ID and click the Save button.

14. The license manager mechanism will then generate a request file (in zip format) containing the *Activation ID(s)* to be reactivated. After successful generation of this file, a modal window indicating successful generation of the request file will be displayed. This modal window will also indicate the file path to the location on the drive where the Request file (in zip format) has been saved. Once you click the *OK* button in this modal window, it will close, and the user interface will revert to the *CAMWorks Product Reactivation - Manual Method* Wizard.

15. Email this generated Request file to register@camworks.com.

16. You will receive a CAMWorks Response File (*.cwlic) file via email within maximum one business day. Save this file on the machine on which you intend to reactivate the license.

17. Launch the CAMWorks License Manager program again. Switch to the *Server Settings* tab.

18. Click on the *Reactivate Existing...* button under this tab.

19. The *CAMWorks Product Reactivation* dialog box will be displayed. Click on the *Reactivate My Products...* command button in this dialog box.

20. The *CAMWorks Product Reactivation - Manual Method* Wizard will be displayed. Click on the *Open...* button in this wizard to browse and select this CAMWorks Response file.

21. Once this file is selected, click on the *Reactivate My Products...* button at the bottom of the wizard.

22. If your products are successfully reactivated, then the modal window labelled *Reactivation Success* listing all the activated products will be displayed. Click on the *OK* button within this modal window to revert to the *CAMWorks Product Reactivation - Manual Method* Wizard.

23. Click on the *Close* button within this wizard to revert to the *CAMWorks Product Reactivation* dialog box.

24. Click on the *Close* button at the bottom of the dialog box to revert to the *Server Settings* tab.

25. Input the mandatory (primary) *Server Port number* and *Secondary Port number* (optional) in the fields provided within the *Options* group box of this tab.

26. Click on the *Start License Service* button within the *Options* group box of this tab. If successfully activated, the *Status* group box at the bottom of the tab will indicate that the license service is now running.

Options Group Box under Server Settings tab when 'Online Activations' Option is selected as the 'Server License Type'

27. Click on the *Apply* button at the bottom of the *CAMWorks License Manager* dialog box.

28. Close the *CAMWorks License Manager* dialog box.

    Your *CAMWorks* license is now successfully reactivated and the *CAMWorks License Service* is also running on your CAMWorks License Server. Your client machines will be able to successfully access the reactivated floating network license on the CAMWorks License Server as the license service is successfully running on it (provided that the originally assigned port numbers were retained).